




Features

- SAF·T·FLO Retractable flanged injection quills are engineered for larger diameter and high velocity pipelines.
- Flanged injection quills require a flanged main connection. This connection must be the same size as the flanged ball valve.
- Flanged injectors can be built with various size flanges, therefore making adaptability to an existing flanged application possible.
- No shut down of the water main or process piping system is required when mounted to a flanged valve.

150 psi. rated

250 psi. rated

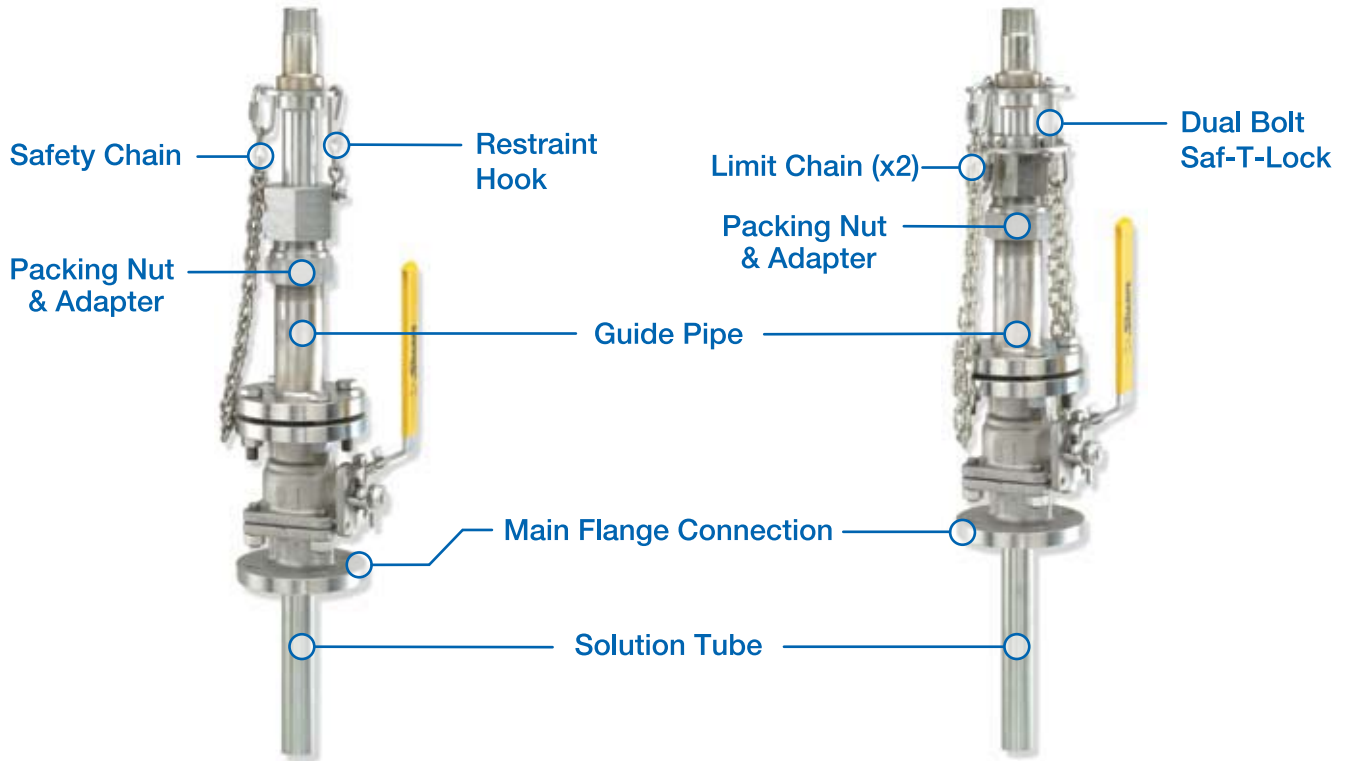

Retractable Flanged Injectors

| Main Connection Flange Size (min. required) | Material of Construction | Solution Tube Diameter | Restraint Rating | Check Valve Available | Saf-T-Seal Tip Available | Base Model Number |
|---|--------------------------|------------------------|------------------|-----------------------|--------------------------|-------------------|
| 3/4" | SS | 3/8" | 150 psi | Optional | Yes | EB-177 |
| 1" | SS | 1/2" | 150 psi | Optional | Yes | EB-181 |
| 1" | SS | 1/2" | 250 psi | Optional | Yes | EB-183 |
| 1-1/4" | SS | 3/4" | 250 psi | Optional | n/a | EB-188 |
| 1-1/2" | SS | 1" | 250 psi | Optional | n/a | EB-182 |
| 2" | SS | 1-1/2" | 250 psi | Optional | n/a | EB-184 |
| 2-1/2" | SS | 2" | 250 psi | Optional | n/a | EB-185 |
| 3" | SS | 2-1/2" | 250 psi | Optional | n/a | EB-186 |

Features

- 150# or 300# Flange
- Stainless Steel, A-20, Hastelloy C, and Titanium solution tubes available
- Preset Stainless Steel Limit Chain(s)
- Tip Configuration
 1. Plain Tip
 2. Bevel Tip with Alignment Arrow
 3. SAF-T-SEAL
- Diffuser (Optional)
- Check Valve (Optional)
- Lengths Over 6 Inches

Maintenance

- Periodically remove solution tube to check for internal or exterior chemical build-up
- Apply grease to the compression o-ring
- Re-apply Anti-Seize to Packing Nut & Adapter threads

Additional Saf-T-Flo Models

- 150 psi. rated Retractable Injection Quills
- 250 psi. rated Retractable Injection Quills
- All PVC Retractable Injection Quills
- Non-Retractable Injection Quills
- Sampling Probes



Please contact our Asia Pacific distributor:

H2O Rx

Phone: 0409 784 236 or 0421 795 353

info@h2orx.com.au

www.h2orx.com.au